

The Sampling Kit:

1



Zip-lock bag

Filter

Syringe



Bottle



Gloves

2



If dipper is needed, assemble it now

3

Wear gloves



4

Rinse the dipper and take a sample




5

Take a syringe (Do not touch the tip!)



6

Suck in water from the dipper

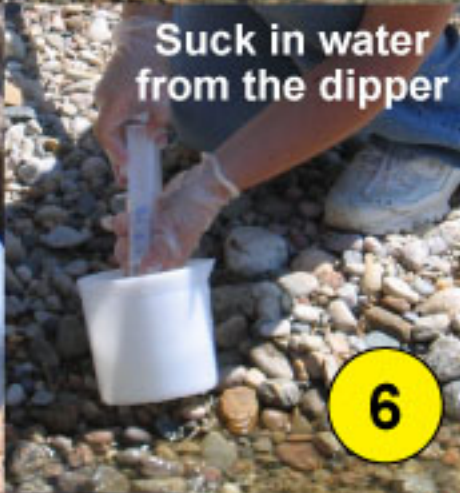

7

Discard water from syringe, then suck in new water from the dipper



8

Attach the filter (Do not touch the tip!)



9

at least 20 ml
Push some water through the filter



10

Push some water into the bottle



11

Close bottle, shake, ...





If possible, store zip-lock bag with bottle and filter in a **Freezer** until mailing the sample to WHOI for analysis.
Mail to: Dr. Bernhard Peucker-Ehrenbrink, WHOI, MS 25, 360 Woods Hole Road, Woods Hole, MA 02543-1541, USA.

THANK YOU FOR YOUR HELP AND PARTICIPATION!